

Implémentation Midi EX-9

PC (Program Change)		Fonction
Number	Bank	
0-127	0	Preset 1 - 128
0-127	1	Preset 129 - 256

*

Level	Value
....
+2 dB	98
+1 dB	97
0.0 dB	96
-1 dB	95
-2 dB	94
....

CC (Control Change)			Fonction
Hex	Number	Value	
0x0	00	0, 1 - 127	Bank 0
0x1	01	0, 1 - 127	Bank 1
0x4	04	0, 1 - 127	Loop - 1
0x5	05	0, 1 - 127	Loop - 2
0x6	06	0, 1 - 127	Loop - 3
0x7	07	0, 1 - 127	Loop - 4
0x8	08	0, 1 - 127	Loop - 5
0x9	09	0, 1 - 127	Loop - 6
0xA	10	0, 1 - 127	Loop - 7
0xB	11	0, 1 - 127	Loop - 8
0xC	12	0, 1 - 127	Loop - 9
0xD	13	0, 1 - 127	Phase A
0xE	14	0, 1 - 127	Phase B
0xF	15	0, 1 - 127	Ctrl 1T
0x10	16	0, 1 - 127	Ctrl 1R
0x11	17	0, 1 - 127	Ctrl 2T
0x12	18	0, 1 - 127	Ctrl 2R
0x13	19	0, 1	Bypass
0x14	20	0, 1	Mute
0x19	25	1	Loop Group
0x1A	26	1	Phase Group
0x1B	27	1	Aux Group
0x1C	28	1	Level Group
0x1D	29	1	Midi Group
0x1E	30	1	Active Level A
0x1F	31	1	Active Level B
0x20	32	0, 1 - 127	Midi Message 1
0x21	33	0, 1 - 127	Midi Message 2
0x22	34	0, 1 - 127	Midi Message 3
0x23	35	0, 1 - 127	Midi Message 4
0x24	36	0, 1 - 127	Midi Message 5
0x25	37	0, 1 - 127	Midi Message 6
0x26	38	0, 1 - 127	Midi Message 7
0x27	39	0, 1 - 127	Midi Message 8
0x29	41	0, 127	Level A *
0x2A	42	0, 128	Level B *
0x2B	43	0, 129	Level A&B *

